

EUCHNER

Operating Instructions

Non-Contact Safety Switch
CES-AR-C.2-... (Unicode/Multicode)

EN

Contents

1.	About this document.....	4
1.1.	Scope.....	4
1.2.	Safety switch type label.....	4
1.3.	Target group	4
1.4.	Key to symbols.....	4
1.5.	Supplementary documents	4
2.	Correct use	5
3.	Cyber security and data usage.....	7
3.1.	Notes on MR and CRA.....	7
3.1.1.	Remaining cyber security risks.....	7
3.1.2.	Handling and reporting vulnerabilities.....	8
3.2.	Note on Directive 2014/53/EU RED (Radio Equipment Directive) and Delegated Regulation (EU) 2022/30	8
4.	Description of the safety function	9
5.	Exclusion of liability and warranty	9
6.	General safety precautions	9
7.	Function	10
7.1.	Door monitoring output	10
7.2.	Diagnostic output	10
7.3.	Limit-range monitoring	10
7.4.	Switching states	10
8.	Mounting.....	11
9.	Electrical connection	12
9.1.	Notes on UL.....	13
9.2.	Safety in case of faults.....	13
9.3.	Fuse protection for power supply	13
9.4.	Requirements for connecting cables.....	13
9.5.	Maximum cable lengths.....	14
9.5.1.	Determining cable lengths using the example table.....	15
9.6.	Connector assignment of safety switch CES-AR.....	16
9.7.	Connector assignment of Y-distributor	17
9.8.	Connection of a single AR device	18
9.9.	Connection of several devices in a switch chain	19
9.10.	Notes on operation on an AR evaluation unit	21
9.11.	Notes on operation with safe control systems.....	21

10. Setup 23

10.1. LED displays23

10.2. Teach-in function for actuator (only for unicode evaluation)23

10.2.1. Preparing device for the teach-in operation and teaching-in actuator23

10.2.2. Teach-in function with series connection, replacing and teaching-in device24

10.3. Functional check.....24

10.3.1. Electrical function test.....24

11. System status table 25

12. Technical data 26

12.1. Technical data for safety switch CES-AR-C.2-...26

12.1.1. Typical system times.....27

12.1.2. Dimension drawing for safety switch CES-AR-C.2-.....28

12.2. Technical data for actuator CES-A-BLN-...29

12.2.1. Dimension drawing.....29

12.2.2. Operating distances30

12.2.3. Typical operating distance30

12.3. Technical data for actuator CES-A-BDN-0631

12.3.1. Dimension drawing.....31

12.3.2. Operating distances31

13. Ordering information and accessories 32

14. Inspection and service 32

15. Service 32

16. Declaration of conformity 32

1. About this document

1.1. Scope


These operating instructions are valid for all CES-AR-C.2-... of version V1.1.X. These operating instructions, the document *Safety information* and any enclosed data sheet form the complete user information for your device.



Important!

Make sure to use the operating instructions valid for your product version. The version number can be found on the type label of your product. Please contact the EUCHNER support team if you have any questions.

1.2. Safety switch type label

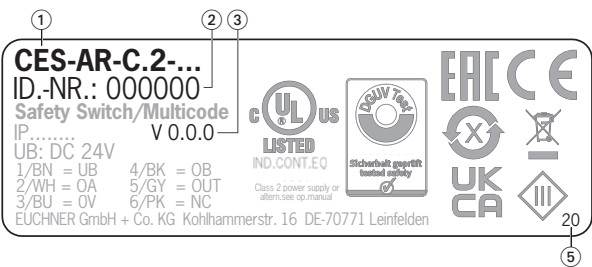

- ① Item designation
- ② Item number
- ③ Version
- ④ Serial number
- ⑤ Year of manufacture

1.3. Target group

Design engineers and installation planners for safety systems on machines, as well as setup and servicing staff possessing special expertise in handling safety components.

1.4. Key to symbols

Symbol/depiction	Meaning
	Printed document
	Document is available for download at www.euchner.com
 DANGER WARNING CAUTION	Safety precautions Danger of death or severe injuries Warning about possible injuries Caution slight injuries possible
 NOTICE Important!	Notice about possible device damage Important information
Tip	Useful information

1.5. Supplementary documents

The overall documentation for this device consists of the following documents:

Document title (document number)	Contents	
Safety information (2525460)	Basic safety information	
Operating instructions (2109309)	(this document)	
Declaration of conformity	Declaration of conformity	
Possibly enclosed data sheet	Item-specific information about deviations or additions	



Important!

Always read all documents to gain a complete overview of safe installation, setup and use of the device. The documents can be downloaded from www.euchner.com. Simply enter the document number or the order number in the search box.

2. Correct use

Safety switches series CES-AR are interlocking devices without guard locking (type 4). The device meets the requirements according to EN IEC 60947-5-3. Devices with unicode evaluation possess a high coding level, devices with multicode evaluation possess a low coding level.

In combination with a movable guard and the machine control, this safety component prevents dangerous machine functions from occurring while the guard is open. A stop command is triggered if the guard is opened during the dangerous machine function.

This means:

- Starting commands that cause a dangerous machine function must become active only when the guard is closed.
- Opening the guard triggers a stop command.
- Closing a guard must not cause automatic starting of a dangerous machine function. A separate start command must be issued. For exceptions, refer to EN ISO 12100 or relevant C-standards.

Before the device is used, a risk assessment must be performed on the machine, e.g. in accordance with the following standards:

- EN ISO 13849-1
- EN ISO 12100
- IEC 62061

Correct use includes observing the relevant requirements for installation and operation, particularly based on the following standards:

- EN ISO 13849-1
- EN ISO 14119
- EN IEC 60204-1

The safety switch is only allowed to be operated in conjunction with the intended EUCHNER CES actuators and the related connection components from EUCHNER. If different actuators or other connection components are used, EUCHNER provides no warranty for safe function.

Connection of several devices in an AR switch chain is permitted only using devices intended for series connection in an AR switch chain. Check this in the instructions of the device in question.

A maximum of 20 safety switches are allowed to be operated in a switch chain.



Important!

- The user is responsible for the proper integration of the device into a safe overall system. For this purpose, the overall system must be validated, e.g. in accordance with EN ISO 13849-1.
- It is only allowed to use components that are permissible in accordance with the table below.

Table 1: Possible combinations for CES components

Safety switch	Actuator			
	Door hinge right CES-A-BLN-R2 100776	Door hinge left CES-A-BLN-L2 104510	Use independent of position of door hinge CES-A-BLN-U2 103450	CES-A-BDN-06 104730
	Door hinge right CES-AR-CR2-...			
Door hinge left CES-AR-CL2-...				
Key to symbols		Combination possible		



NOTICE

Devices with version number V1.1.2 or higher can be operated on an AR evaluation unit. Refer to the operating instructions for the relevant AR evaluation unit for more information.

3. Cyber security and data usage

3.1. Notes on MR and CRA

The product was evaluated in accordance with the guidelines of the Machinery Regulation (MR) and the Cyber Resilience Act (CRA) and complies with the requirements of the respective standards when used correctly.

Pay attention to the remaining risks for use and minimize them by taking into account the measures listed here, insofar as they apply to your product.

3.1.1. Remaining cyber security risks

The product can be modified using an internal EUCHNER interface. Pay attention to the following measures in particular for minimizing risks:

- › Ensure that the product was not tampered with or compromised during transport or before setup.
- › Integrate the product into a trustworthy environment and restrict access to only authorized users and systems.
- › Integrate the product so that physical access to it is minimized.
- › Periodically check whether tampering within the meaning of cyber security has occurred.

The following overview provides detailed information about the stated measures.

Product life-cycle phase	Suitable measures for reducing cyber risks (examples)
Procurement	Ensure that the device was not tampered with or compromised during transport or before setup: › Obtain the product exclusively from trustworthy sources. › Check the product on goods receipt and before installation. The packaging, seal and other safety components must be undamaged and must not show any signs of tampering.
Configuration and installation	Integrate the product so that physical access to it is minimized. › Lay cables with protection. › Install the product in a concealed position.
	Operate the product exclusively within a trustworthy environment: › Protect the product or the communication interface from being physically accessed by unauthorized persons. › Protect the installation or installation part from being physically accessed by unauthorized persons.
Operation	Follow the generally recognized rules for planning, operating and securing networks: › Deactivate unused services. › Deactivate unused ports. › Use IP and MAC filters. › Always use the latest software or firmware. › Use the product only in trustworthy networks. › Use network segmentation to restrict access. › Enable the option of accessing logs, system statistics and relevant system parameters if necessary. › Secure the communication via public networks by using VPN connections.
	Periodically check whether tampering within the meaning of cyber security has occurred: › Check the product for signs of tampering, e.g. opened housings. › Check whether devices have been connected in between or whether conspicuous cables have been retrofitted. › Evaluate access logs, statistics and system parameters.
Disposal	Installations and products must always comply with the required security level: › Use the latest software or firmware. › Use the latest product version (hardware version). Replace the product if necessary. › React to known vulnerabilities immediately. › Regularly check access rights.
	To prevent unauthorized access, delete sensitive data from the product's memory and from the software: › Perform a factory reset on the product. › Delete confidential settings or database contents. › Shred the product or data memory media if the data cannot be deleted.

3.1.2. Handling and reporting vulnerabilities

EUCHNER publishes vulnerabilities on the CERT@VDE page at www.certvde.com.

The EUCHNER PSIRT (Product Security Incident Response Team) is the central point of contact for reporting potential safety gaps in our products and services.

You can report any potential safety gap to the PSIRT.

Further information about PSIRT and vulnerability handling is available at www.euchner.com/en-us/service/cybersecurity/psirt/.

3.2. Note on Directive 2014/53/EU RED (Radio Equipment Directive) and Delegated Regulation (EU) 2022/30

EUCHNER components and systems must not be integrated into public networks.

EUCHNER components are intended only for use in private networks. Use a VPN connection for remote access.

4. Description of the safety function

Devices from this series feature the following safety functions:

Monitoring of the guard position
(interlocking device according to EN ISO 14119)

- › Safety function:
 - The safety outputs are switched off when the guard is open (see chapter 7.4. Switching states on page 10).
- › Safety characteristics: category, Performance Level, PFH (see chapter 12. Technical data on page 26).

5. Exclusion of liability and warranty

In case of failure to comply with the conditions for correct use stated above, or if the safety regulations are not followed, or if any servicing is not performed as required, liability will be excluded and the warranty void.

6. General safety precautions

Safety switches fulfill personnel protection functions. Incorrect installation or tampering can lead to fatal injuries to personnel.

Check the safe function of the guard particularly

- › after any setup work
- › after the replacement of a system component
- › after an extended period without use
- › after every fault

Independent of these checks, the safe function of the safeguard should be checked at suitable intervals as part of the maintenance schedule.



WARNING

Danger to life due to improper installation or due to bypassing (tampering). Safety components fulfill a personnel protection function.

- › Safety components must not be bypassed, turned away, removed or otherwise rendered ineffective. On this topic pay attention in particular to the measures for reducing the possibility of bypassing according to EN ISO 14119:2025, section 8.
- › The switching operation must be activated only by actuators designated for this purpose.
- › Prevent bypassing by means of replacement actuators (only for multicode evaluation). For this purpose, restrict access to actuators.
- › Mounting, electrical connection and setup only by authorized personnel possessing the following knowledge:
 - specialist knowledge in handling safety components
 - knowledge about the applicable EMC regulations
 - knowledge about the applicable regulations on operational safety and accident prevention.



Important!

Prior to use, read the operating instructions and keep these in a safe place. Ensure the operating instructions are always available during mounting, setup and servicing. For this reason you should archive a printed copy of the operating instructions. You can download the operating instructions from www.euchner.com.

7. Function

The safety switch monitors the position of movable guards. The safety outputs are switched on/off when the actuator is moved to/removed from the actuating range.

The system consists of the following components: coded actuator (transponder) and switch.

Whether the device learns the complete actuator code (unicode) or not (multicode) depends on the respective version.

- **Devices with unicode evaluation:** The actuator must be assigned to the safety switch by a teach-in operation so that it is detected by the system. This unambiguous assignment ensures a particularly high level of protection against tampering. The system thus possesses a high coding level.
- **Devices with multicode evaluation:** Unlike systems with unique code detection, on multicode devices a specific code is not requested but instead it is only checked whether the actuator is of a type that can be detected by the system (multicode detection). There is no exact comparison of the actuator code with the taught-in code in the safety switch (unique code detection). The system possesses a low coding level.

When the guard is closed, the actuator is moved toward the safety switch. When the operating distance is reached, power is supplied to the actuator by the switch and data are transferred.

If a permissible code is detected, the safety outputs are switched on.

The safety outputs are switched off when the guard is opened.

In the event of a fault in the safety switch, the safety outputs are switched off and the DIA LED illuminates red. The occurrence of faults is detected at the latest on the next demand to close the safety outputs (e.g. on starting).

7.1. Door monitoring output

The door monitoring output is switched on as soon as a valid actuator is detected in the actuating range.

7.2. Diagnostic output



The diagnostic output is switched on in the event of a fault (switch-on condition as for DIA LED).

7.3. Limit-range monitoring

If the safety door with the actuator should settle over time, the actuator can drift out of the read head actuating range. The device recognizes this situation and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time. See also chapter 11. *System status table on page 25.*

7.4. Switching states

The detailed switching states for your switch can be found in the system status table (see chapter 11. *System status table on page 25*). All safety outputs, monitoring outputs and display LEDs are described there.

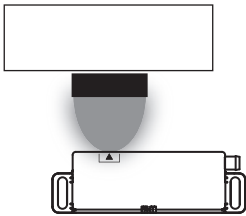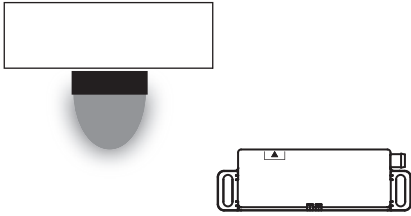	Guard closed (actuator in the actuating range and permissible code detected)	Guard open (actuator not in the actuating range)
		
Safety outputs OA and OB	on	off
Monitoring output OUT	on	off

8. Mounting



CAUTION

Safety switches must not be bypassed (bridging of contacts), turned away, removed or otherwise rendered ineffective.


- › Observe EN ISO 14119:2025, section 8, for information about reducing the possibilities for bypassing an interlocking device.




NOTICE

Risk of damage to equipment and malfunctions as a result of incorrect installation.

- › Safety switches and actuators must not be used as an end stop.
- › Observe EN ISO 14119:2025, sections 6.2 and 6.3, for information about mounting the safety switch and the actuator.
- › From the assured release distance S_{ar} , the safety outputs are safely switched off.
- › When mounting several safety switches, observe the stipulated minimum distance to avoid mutual interference.

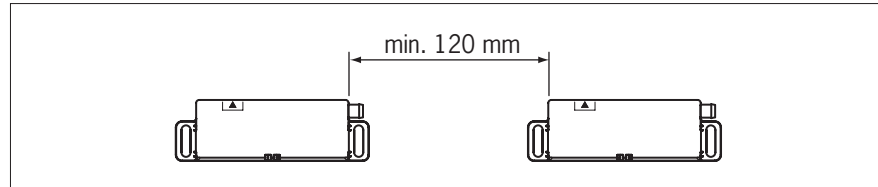

- › The operating distances change during the mounting of the actuator as a function of the material used for the guard.

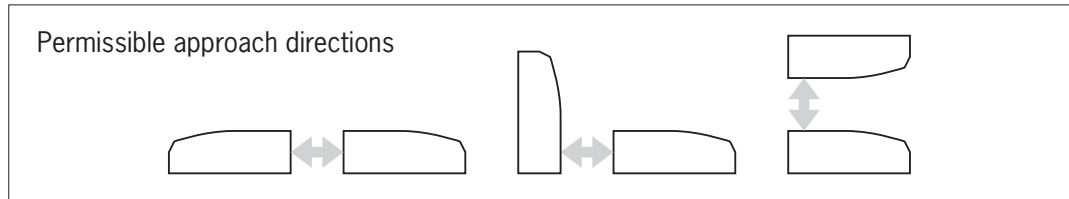

Note the following points:

- › Actuator and safety switch must be easily accessible for inspection and replacement.
- › Actuator and safety switch must be fitted so that
 - the front faces are at the minimum operating distance $0.8 \times S_{a0}$ or closer when the guard is closed (see chapter 12. *Technical data*, sections *Operating distances* and *Typical operating distance*, for the respective actuator). To avoid entering the area of possible side lobes, a minimum distance is to be maintained in case of a side approach direction. See chapter 12. *Technical data*, section *Typical operating distance*, for the related actuator.
 - when the guard is open up to the distance S_{ar} (assured release distance), a hazard is excluded.
 - the actuator is positively mounted on the guard, e.g. by using the safety screws included.
 - the safety screws cannot be removed or tampered with using simple means.
- › Pay attention to the maximum tightening torque for the read head or safety switch and actuator fastenings of 1 Nm.

9. Electrical connection

The following connection options are available:

- › Separate operation
- › Series connection with Y-distributors or the passive distribution module AC-DP-...-SA-... from EUCHNER (only with M12 plug connector)
- › Series connection, e.g. with wiring in the control cabinet
- › Operation on an AR evaluation unit.



WARNING

In the event of a fault, loss of the safety function due to incorrect connection.

- › To ensure safety, both safety outputs must always be evaluated.
- › Monitoring outputs must not be used as safety outputs.
- › Lay the connecting cables with protection to prevent the risk of short circuits.



CAUTION

Risk of damage to equipment or malfunctions as a result of incorrect connection.

- › Do not use a control system with pulsing or switch off the pulsing function in your control system. The device generates its own test pulses on the safety outputs. A downstream control system must tolerate these test pulses, which may have a length of up to 1 ms. The test pulses are also output when the safety outputs are switched off. Depending on the inertia of the downstream device (control system, relay, etc.), this can lead to short switching processes.
- › The inputs on a connected evaluation unit must be positive switching, as the two outputs on the safety switch deliver a level of +24 V in the switched-on state.
- › All electrical connections must either be isolated from the mains supply by a safety transformer according to IEC 61558-2-6 with limited output voltage in the event of a fault, or by other equivalent insulation measures (PELV).
- › All electrical outputs must have an adequate protective circuit for inductive loads. The outputs must be protected with a free-wheeling diode for this purpose. RC interference suppression units must not be used.
- › Power devices which are a powerful source of interference must be installed in a separate location away from the input and output circuits for signal processing. The cable routing for safety circuits should be as far away as possible from the cables of the power circuits.
- › To avoid EMC interference, the physical environmental and operating conditions at the installation site of the device must comply with the requirements according to the standard EN 60204-1 (EMC).
- › Pay attention to any interference fields from devices such as frequency converters or induction heating systems. Observe the EMC instructions in the manuals from the respective manufacturer.



Important!

If the device does not appear to function when operating voltage is applied (e.g. green STATE LED does not flash), the safety switch must be returned unopened to the manufacturer.

9.1. Notes on UL



Important!

- This device is intended to be used with a Class 2 power source in accordance with UL1310. As an alternative an LV/C (Limited Voltage/Current) power source with the following properties can be used:
 - This device shall be used with a suitable isolating source in conjunction with a fuse in accordance with UL248. The fuse shall be rated max. 3.3 A and be installed in the max. 30 V DC power supply to the device in order to limit the available current to comply with the UL requirements. Please note possibly lower connection ratings for your device (refer to the technical data).
- For use and applications as per the requirements of UL ¹⁾, a connecting cable listed under the UL category code CYJV2 or CYJV must be used.

1) Note on the scope of the UL approval: the devices have been tested as per the requirements of UL508 and CSA/C22.2 no. 14 (protection against electric shock and fire). Only for applications as per NFPA 79 (Industrial Machinery).

9.2. Safety in case of faults

- The operating voltage U_B is reverse polarity protected.
- The safety outputs are short circuit-proof.
- A short circuit between the safety outputs is detected by the switch.
- A short circuit in the cable can be excluded by laying the cable with protection.

9.3. Fuse protection for power supply

The power supply must be provided with fuse protection depending on the number of switches and the current required for the outputs. The following rules apply:

Max. current consumption of an individual switch I_{max}

$$I_{max} = I_{UB} + I_{OUT} + I_{OA+OB}$$

$$I_{UB} = \text{Switch operating current (50 mA)}$$

$$I_{OUT} = \text{Load current of monitoring outputs (max. 50 mA)}$$

$$I_{OA+OB} = \text{Load current of safety outputs OA + OB (2 x max. 200 mA)}$$

Max. current consumption of a switch chain ΣI_{max}

$$\Sigma I_{max} = I_{OA+OB} + n \times (I_{UB} + I_{OUT})$$

$$n = \text{Number of connected switches}$$

9.4. Requirements for connecting cables



CAUTION

Risk of damage to equipment or malfunctions as a result of incorrect connecting cables.


- Use connection components and connecting cables from EUCHNER.
- If other connection components are used, the requirements in the following table apply. EUCHNER provides no warranty for safe function in case of failure to comply with these requirements.

Observe the following requirements with respect to the connecting cables:

Parameter	Value	Unit
Conductor cross-section, min.	0.14 ... 0.34	mm ²
R max.	150	Ω/km
C max.	120	nF/km
L max.	0.65	mH/km
Recommended cable type	LIYY 8 x 0.34 mm ²	

9.5. Maximum cable lengths

Switch chains are permitted up to a maximum overall cable length of 200 m taking into account the voltage drop as a result of the cable resistance (see table below with example data and case example).

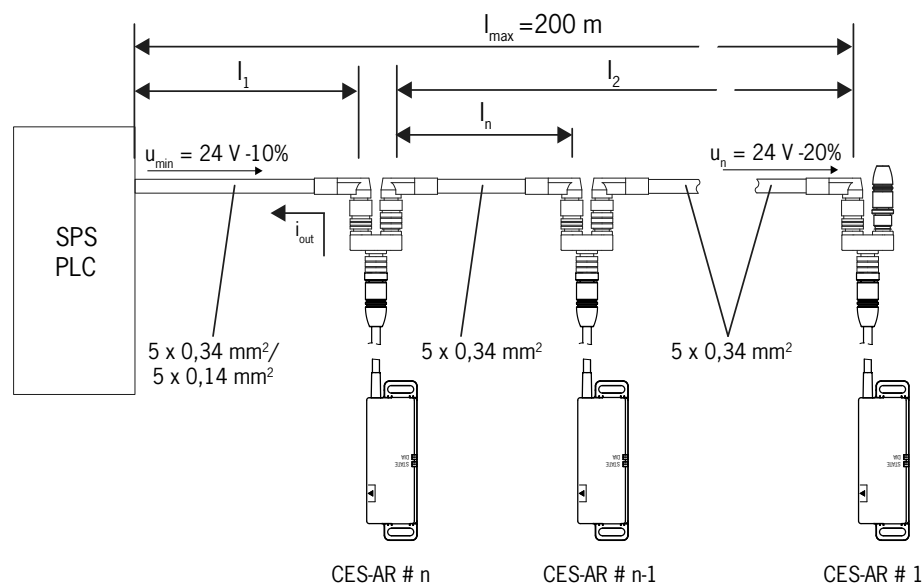

n Max. number of switches	I_{OUT} (mA) Possible output current per channel OA/OB	l_1 (m) Max. cable length from the last switch to the control system	
		0.14 mm ²	0.34 mm ²
5	10	70	140
	25	50	110
	50	35	80
	100	25	50
	200	13	25
6	10	60	120
	25	50	90
	50	35	70
	100	20	50
	200	13	25
10	10	35	70
	25	30	60
	50	25	50
	100	15	35
	200	10	20

9.5.1. Determining cable lengths using the example table

Example: 6 switches are to be used in series. Cabling with a length of 40 m is routed from a safety relay in the control cabinet to the last switch (#6). Cables with a length of 20 m each are connected between the individual safety switches.

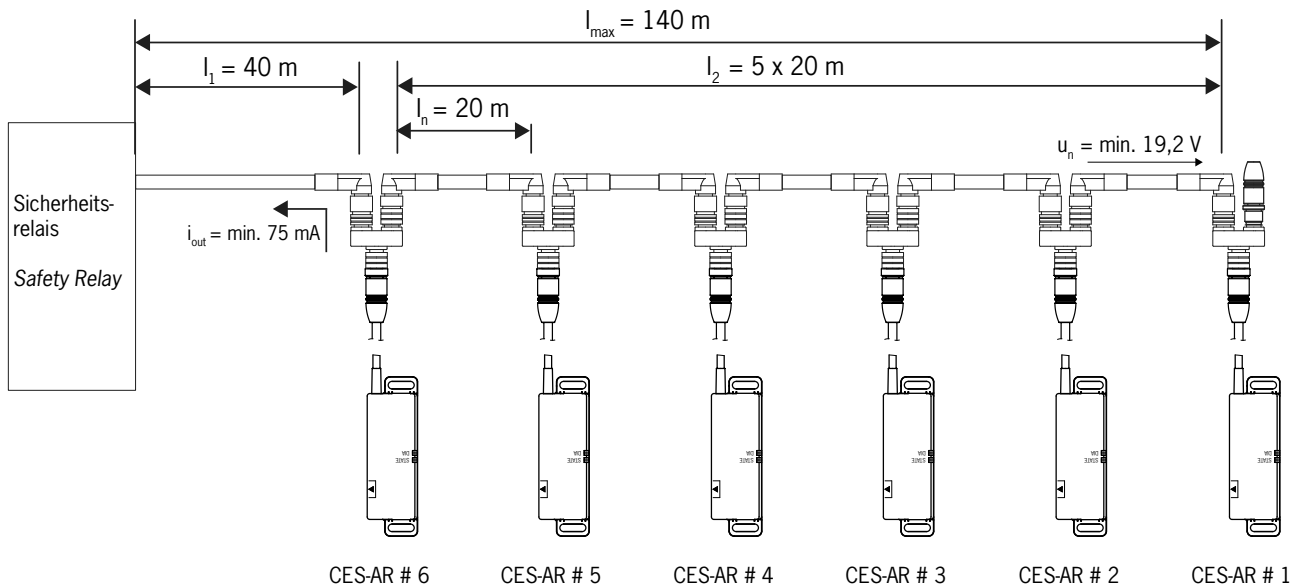


Fig. 1: Circuit example with six CES-AR

A safety relay is connected downstream that consumes 75 mA of current at each of the two safety inputs. It operates over the whole temperature range with a voltage of 19.2 V (corresponds to 24 V - 20%).


All the relevant values can now be determined using the example table:

1. Select the corresponding section in the column n (Max. number of switches). In this case: 6 switches.
 2. In column I_{OUT} (possible output current per channel OA/OB), find a current greater than or equal to 75 mA. In this case: 100 mA.
- ➔ It is then possible to determine the maximum cable length from the last switch (#6) to the control system from column l_1 . In this case, a length of 50 m is permitted.

Result: The desired cable length l_1 of 40 m is below the permitted value from the table. The overall length of the switch chain l_{max} of 140 m is less than the maximum value of 200 m.

➔ The planned application is therefore functional in this form.

9.6. Connector assignment of safety switch CES-AR

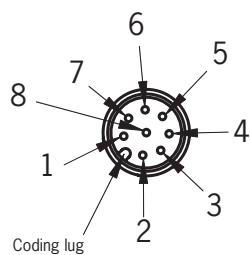

View of connection side on the safety switch

Fig. 2: Connector assignment of safety switch CES-AR


Pin	Designation	Description	Conductor coloring
1	IB	Enable input for channel 2	WH
2	UB	Power supply, DC 24 V	BN
3	OA	Safety output, channel 1	GN
4	OB	Safety output, channel 2	YE
5	OUT	Monitoring output	GY
6	IA	Enable input for channel 1	PK
7	OV	Ground, DC 0 V	BU
8	RST	Reset input	RD

9.7. Connector assignment of Y-distributor

Connector assignment of safety switch CES-AR (8-pin plug) and Y-distributor (8-pin socket)



Pin	Function
X1.1	IB
X1.2	U _B
X1.3	OA
X1.4	OB
X1.5	OUT
X1.6	IA
X1.7	0 V
X1.8	RST

Strapping plug 097645
4-pin, plug
(figure similar)

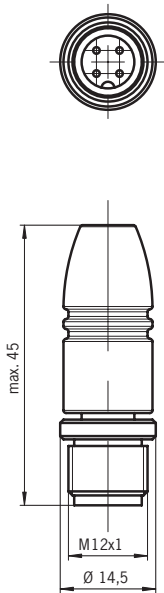

Y-distributor with connecting cable 111696 or 112395

 

Socket

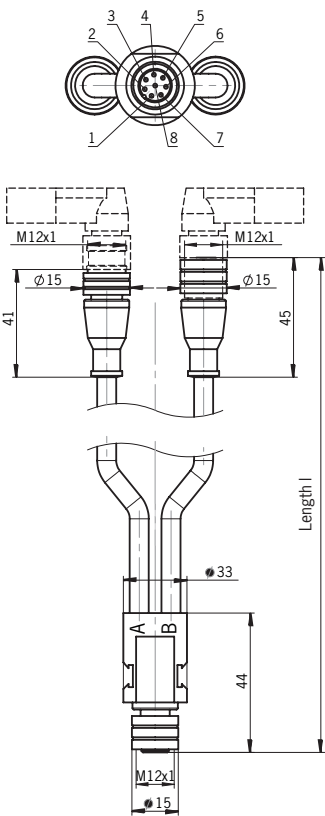

Pin	Function	Pin	Function
X2.1	U _B	X3.1	U _B
X2.2	OA	X3.2	IA
X2.3	0 V	X3.3	0 V
X2.4	OB	X3.4	IB
X2.5	RST	X3.5	RST

Y-distributor 097627

Socket

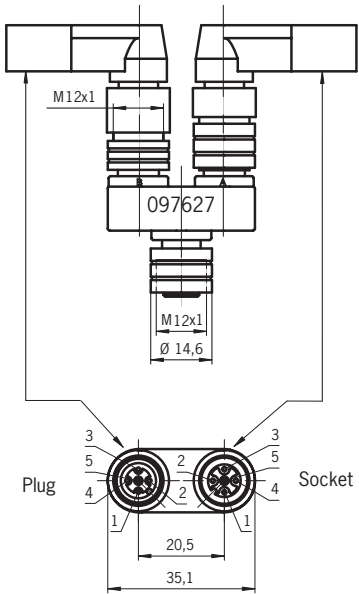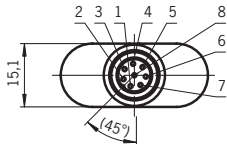

Pin	Function	Pin	Function
X2.1	U _B	X3.1	U _B
X2.2	OA	X3.2	IA
X2.3	0 V	X3.3	0 V
X2.4	OB	X3.4	IB
X2.5	RST	X3.5	RST

9.8. Connection of a single AR device

If a single AR device is used, connect the device as shown in Fig. 3. Monitoring outputs can be routed to a control system. The switch can be reset via the RST input. To do this, a voltage of 24 V is applied to the RST input for at least 3 seconds. The RST input must be connected to 0 V if it is not used.



WARNING

In the event of a fault, loss of the safety function due to incorrect connection.
▸ To ensure safety, both safety outputs (OA and OB) must always be evaluated.



Important!

The example shows only an excerpt that is relevant for the connection of the CES system. The example illustrated here does not show complete system planning. The user is responsible for safe integration into the overall system. Detailed application examples can be found at www.euchner.com. Simply enter the order number of your switch in the search box. You will find all available connection examples for the device in *Downloads*.

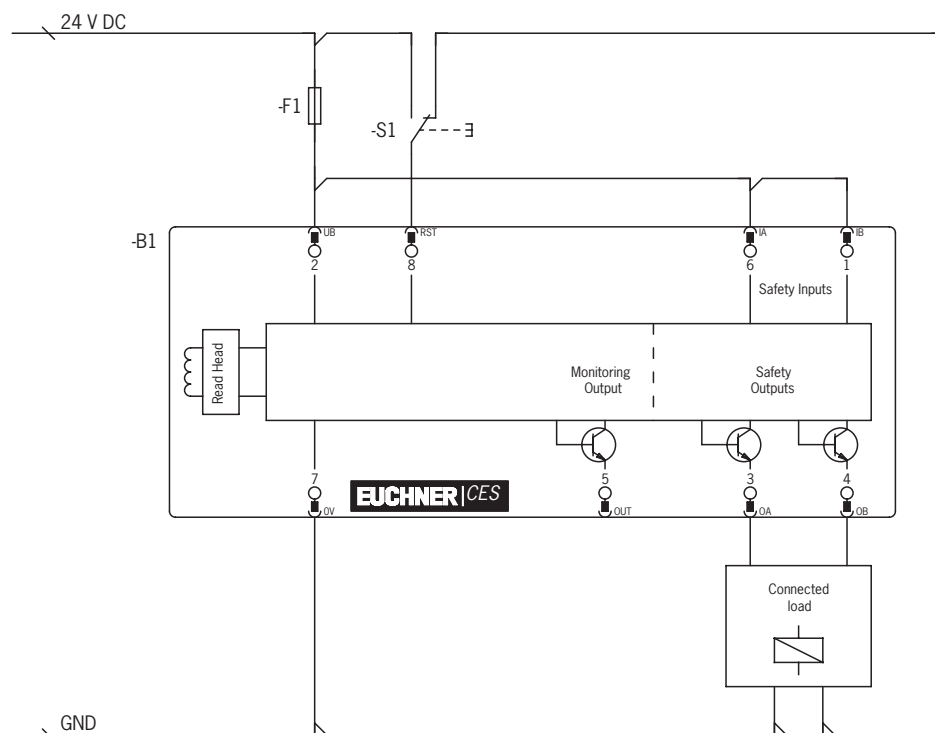


Fig. 3: Connection example for separate operation of a CES-AR-...

9.9. Connection of several devices in a switch chain



Important!

- › An AR switch chain may contain a maximum of 20 safety switches.
- › The example shows only an excerpt that is relevant for the connection of the CES system. The example illustrated here does not show complete system planning. The user is responsible for safe integration into the overall system. Detailed application examples can be found at www.euchner.com. Simply enter the order number of your switch in the search box. You will find all available connection examples for the device in *Downloads*.

The series connection is shown here based on the example of the version with plug connector M12. The switches are connected one behind the other with the aid of pre-assembled connecting cables and Y-distributors. If a safety door is opened or if a fault occurs on one of the switches, the system shuts down the machine. A higher-level control system cannot, however, detect which safety door is open or on which switch a fault has occurred with this connection technology. A special AR evaluation unit is required for this purpose (see chapter 9.10. *Notes on operation on an AR evaluation unit on page 21*).

The series connection can also be realized via additional terminals in a control cabinet.

The safety outputs are permanently assigned to the respective safety inputs of the downstream switch. OA must be connected to IA and OB to IB. If the connections are interchanged (e.g. OA to IB), the device will switch to fault state.

Always use the RST input in series connections. All switches in a chain can be reset at the same time with this reset input. To do this, a voltage of 24 V must be applied to the RST input for at least 3 seconds. If the RST input is not used in your application, it must be connected to 0 V.

Note the following on this aspect:

- › A common signal must be used for all switches in the chain. This can be a changeover switch or the output of a control system. A pushbutton is not suitable because the reset must always be connected to GND during operation (see switch S1 in *Fig. 4 on page 20*).
- › Reset must always be performed simultaneously for all switches of the chain.

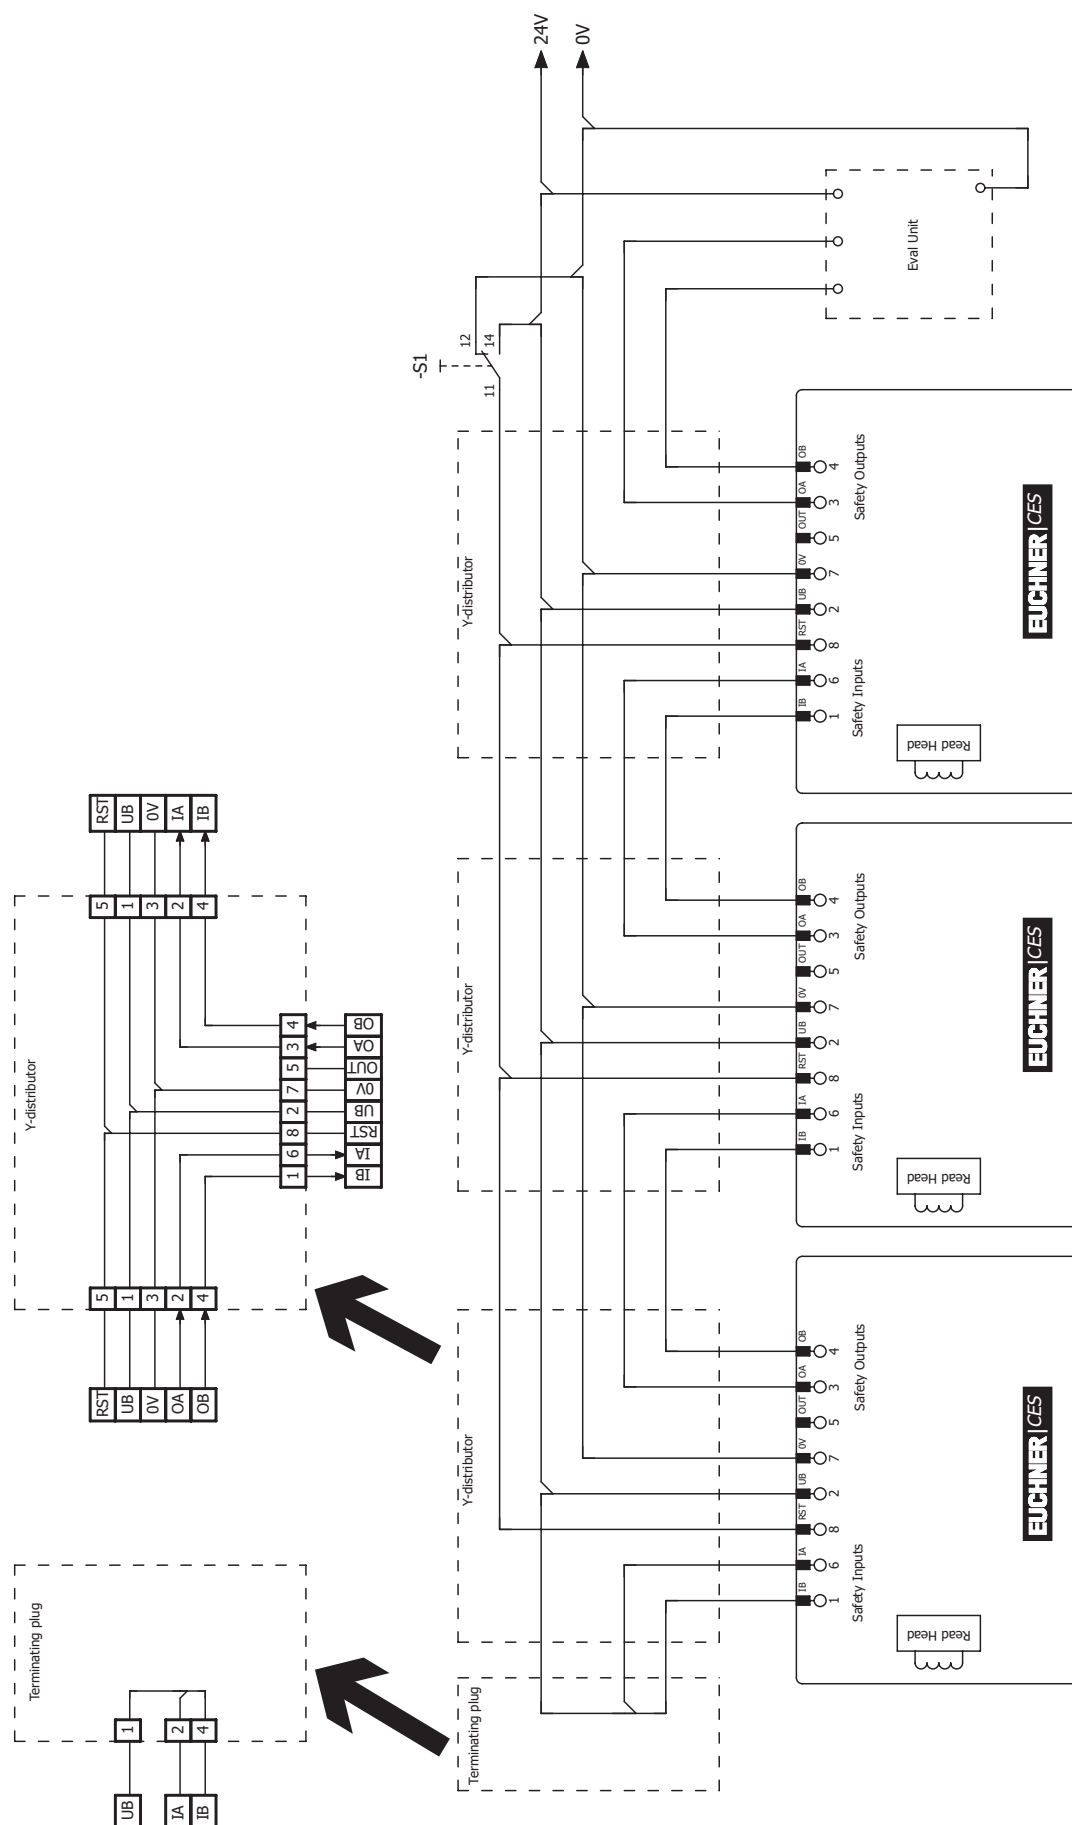


Fig. 4: Connection example for series connection with reset and changeover switch

9.10. Notes on operation on an AR evaluation unit

Devices with version number V1.1.2 or higher can be operated on an AR evaluation unit. Refer to the operating instructions for the relevant AR evaluation unit for more information.

9.11. Notes on operation with safe control systems

Observe the following guidelines for connection to safe control systems:

- › Use a common power supply for the control system and the connected safety switches.
- › A pulsed power supply must not be used for U_B . Tap the supply voltage directly from the power supply unit. If the power supply is connected to a terminal of a safe control system, this output must provide sufficient electrical current.
- › Always connect inputs IA and IB directly to a power supply unit or to outputs OA and OB of another EUCHNER AR device (series connection). Pulsed signals must not be present at inputs IA and IB.
- › The safety outputs (OA and OB) can be connected to the safe inputs of a control system. Prerequisite: The input must be suitable for pulsed safety signals (OSSD signals, e.g. from light grids). The control system must tolerate test pulses on the input signals. This normally can be set up by parameter assignment in the control system. Observe the notes of the control system manufacturer. For the test pulse duration of your safety switch, refer to chapter 12. *Technical data on page 26.*

A detailed example of connecting and setting the parameters of the control system is available for many devices at www.euchner.com, in the area *Downloads/Applications/CES*. The features of the respective device are dealt with there in greater detail.




10. Setup

10.1. LED displays

You will find a detailed description of the signal functions in chapter 11. *System status table on page 25.*

LED	Color
STATE	green
DIA	red

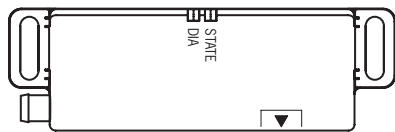

10.2. Teach-in function for actuator (only for unicode evaluation)

The actuator must be allocated to the safety switch using a teach-in function before the system forms a functional unit.

During a teach-in operation, the safety outputs and the monitoring output OUT are switched off, i.e. the system is in the safe state.

	Tip! It is recommended to perform the teach-in operation prior to mounting. Mark switches and actuators that belong together in order to avoid confusion. For devices to be connected in series, we recommend performing the teach-in operation separately for each device prior to series connection.
	Important! ▸ The teach-in operation may be performed only if the device functions flawlessly. The red DIA LED must not be illuminated. ▸ The safety switch disables the code of the preceding device if teach-in is carried out for a new actuator. Teach-in is not possible again immediately for this device if a new teach-in operation is carried out. The disabled code is enabled again in the safety switch only after a third code has been taught-in. ▸ The safety switch can be operated only with the last actuator taught-in. ▸ The number of teach-in operations is unlimited. ▸ After starting, the device remains in teach-in standby for 3 min. If no new actuator is detected in this time, the device changes to normal operation. If the switch detects the actuator that was most recently taught-in when in teach-in standby, this state is ended immediately and the switch changes to normal operation. ▸ If the actuator to be taught-in is in the actuating range for less than 60 s, it will not be activated and the most recently taught-in actuator will remain saved. ▸ After an unsuccessful teach-in operation, the switch changes to normal operation.

10.2.1. Preparing device for the teach-in operation and teaching-in actuator

1. Apply operating voltage to the safety switch.
 - ➔ The green LED flashes quickly (approx. 10 Hz).
A self-test is performed during this time (approx. 10 s). After this, the LED flashes cyclically three times and signals teach-in standby.
Teach-in standby remains active for approx. 3 minutes.
2. Move new actuator to the read head (observe distance < S_{ao}).
 - ➔ Teach-in operation starts, green LED flashes (approx. 1 Hz). During the teach-in operation, the safety switch checks whether the actuator is a disabled actuator. Provided this is not the case, the teach-in operation is completed after approx. 60 seconds, and the green LED goes out. The new code has now been stored, and the old code is disabled.
3. To activate the new actuator code from the teach-in operation in the safety switch, the operating voltage to the safety switch must then be switched off for min. 3 seconds.

10.2.2. Teach-in function with series connection, replacing and teaching-in device

It is recommended not to teach-in the actuators in the series connection but to teach them in one by one instead. Teach-in in a series connection works analogously to separate operation in principle. All switches in the chain can be taught-in at the same time. The prerequisite is that the switch chain functions without problems and the following steps are followed. Further steps might have to be observed for mixed switch chains (e.g. for chains with CES and safety switches with guard locking). Observe the operating instructions for the other devices in the chain for this purpose.

Work on the wiring (e.g. during device replacement) should generally be performed in a de-energized state. On certain systems, it is nevertheless necessary to perform this work and subsequent teach-in during ongoing operation.

The RST input must be connected as shown in *Fig. 4 on page 20* to permit this.

Proceed as follows:

1. Open the guard on which the switch or actuator is to be replaced.
2. Mount the new switch or actuator and prepare it for the teach-in operation (see chapter 10.2.1. *Preparing device for the teach-in operation and teaching-in actuator on page 23*).
3. Close all guards in the chain.
4. Actuate the reset for at least 3 s (24 V on RST).
 - ➔ On the safety switch that is positioned at a new actuator, the green LED flashes at approx. 1 Hz and the actuator is taught-in. This takes approx. 1 min. Do not switch off during this time and do not actuate reset! The teach-in operation has ended when all LEDs on the device are off.
5. Actuate the reset for at least 3 s (24 V on RST).
 - ➔ The system restarts and then continues to function in normal operation.

10.3. Functional check



WARNING

Danger of fatal injury as a result of faults in installation and the functional check.

- › Before carrying out the functional check, make sure that there are no persons in the danger area.
- › Observe the valid accident prevention regulations.

10.3.1. Electrical function test

After installation and any fault, the safety function must be fully checked. Proceed as follows:

1. Switch on operating voltage.
 - ➔ The machine must not start automatically.
 - ➔ The safety switch carries out a self-test. The green STATE LED flashes for 10 s at 10 Hz. The green STATE LED then flashes at regular intervals.
2. Close all guards.
 - ➔ The machine must not start automatically.
 - ➔ The green STATE LED illuminates continuously.
3. Enable operation in the control system.
4. Open the guard.
 - ➔ The machine must switch off and it must not be possible to start it as long as the guard is open.
 - ➔ The green STATE LED flashes at regular intervals.

Repeat steps 2 - 4 for each guard.

11. System status table

Operating mode	Actuator/door position	Safety outputs OA and OB	Monitoring output OUT	LED indicator Output		State
				STATE (green)	DIA (red)	
Self-test	X	off	off	 10 Hz (10 s)	○	Self-test after power-up
Normal operation	closed	on	on		○	Normal operation, door closed
	closed	on	on	 inverted flash burst	○	Normal operation, door closed, actuator in the limit range ➔ Re-adjust door (V. 1.1.2 or higher)
	closed	off	on	 1 x inverse	○	Normal operation, door closed, preceding device in the switch chain signals <i>door open</i> (only with series connection)
	open	off	off	 1 x	○	Normal operation, door open
	open	off	off	 2 x	○	Normal operation, door open; no actuator was taught-in successfully during initial setup
Teach-in operation (only unicode)	open	off	off	 3 x	○	Door open, device is ready for teach-in for a new actuator (only short time after power-up) - Switches that have not been taught-in remain in teach-in standby until the teach-in operation starts
	closed	off	off	 1 Hz	○	Teach-in operation
	X	off	off	○	○	Positive acknowledgment after completion of teach-in operation
Fault display	X	off	off	 2 x		Input fault (e.g. missing test pulses, illogical switching state from preceding device in the switch chain)
	X	off	off	 4 x		Output fault (e.g. short circuits, loss of switching ability)
	X	off	off	 5 x		Internal fault (e.g. component fault, data error)
Key to symbols	○					LED not illuminated
						LED illuminated
	 10 Hz (10 s)					LED flashes for 10 seconds at 10 Hz
	 3 x					LED flashes three times; cycle time 7 s
	X					Any state

After the cause has been remedied, faults can generally be reset by opening and closing the guard. If the fault is still displayed afterward, use the reset function or briefly interrupt the power supply. Contact the manufacturer if the fault could not be reset after restarting.



Important!

If you do not find the displayed device status in the system status table, this indicates an internal device fault. In this case, you should contact the manufacturer.

12. Technical data



NOTICE

If a data sheet is available for the product, the information on the data sheet applies.

12.1. Technical data for safety switch CES-AR-C.2-...

Parameter		min.	Value	max.	Unit
Housing material			PBT plastic		
Dimensions			95 x 30 x 12		mm
Degree of protection			IP67/IP69K (IP67 for version with M12 plug connector)		
Safety class			III		
Degree of contamination			3		
Installation position			Any		
Connection			- Plug connector M8, 8-pin, or - Connecting cable PUR, 0.14 mm ² , with plug connector M12, 8-pin, or - Connecting cable PUR with flying lead, 8 x 0.14 mm ²		
Ambient temperature at U _B = DC 24 V					°C
- Plug connector M8		- 25	-	+ 65	
- Connecting cable laid rigidly		- 40	-	+ 65	
- Connecting cable movable		0	-	+ 65	
Storage temperature		- 40	-	+ 70	
Operating voltage U _B (regulated, residual ripple < 5%)			24 ± 15% (PELV)		V DC
Current consumption			50		mA
External fuse (operating voltage)		0.25	-	8	A
Safety outputs OA/OB			Semiconductor outputs, p-switching, short circuit-proof		
- Output voltage U(OA)/U(OB) ¹⁾					
HIGH U(OA)		U _B -1.5	-	U _B	V DC
HIGH U(OB)					
LOW U(OA)/U(OB)		0		1	
Switching current per safety output		1	-	200	mA
Utilization category acc. to EN IEC 60947-5-2			DC-13 24 V 200 mA Caution: outputs must be protected with a free-wheeling diode in case of inductive loads.		
Off-state current I _r			≤ 0.25		mA
Monitoring output OUT ¹⁾			p-switching, short circuit-proof		
- Output voltage		0.8 x U _B	-	U _B	V DC
- Max. load		-	-	50	mA
Rated insulation voltage U _i		-	-	75	V
Rated impulse withstand voltage U _{imp}		-	-	1.5	kV
Rated conditional short-circuit current			100		A
Resilience to vibration			Acc. to EN IEC 60947-5-2		
Switching frequency		-	-	1	Hz
Repeat accuracy R			≤ 10		%
EMC protection requirements			Acc. to EN IEC 60947-5-3		
Ready delay		-	10	-	s
Risk time for single device		-	-	260	ms
Risk time delay per device			5		ms
Turn-on time		-	-	400	ms
Discrepancy time		-	-	10	ms
Test pulse duration			1		ms
Test pulse interval			140		ms
Reliability values acc. to EN ISO 13849-1					
Monitoring of the guard position					
Category			4		
Performance Level			PL e		
PFH			1.9 x 10 ⁻⁹ / h ²⁾		
Mission time			20		years

¹⁾ Values at a switching current of 50 mA without taking into account the cable lengths.

²⁾ Applying the limit value from EN ISO 13849-1:2008, section 4.5.2 (MTTF_D = max. 100 years), the employers' liability insurance association certifies a PFH_D of max. 2.47 x 10⁻⁸.

12.1.1. Typical system times

Refer to the technical data for the exact values.

Ready delay: After switch-on, the device carries out a self-test. The system is ready for operation only after this time.

Turn-on time of safety outputs: The max. reaction time t_{on} is the time from the moment when the actuator is in the actuating range to the moment when the safety outputs switch on.

Simultaneity monitoring of safety inputs IA/IB: If the safety inputs have different switching states over a certain time, the safety outputs (OA and OB) will be switched off. The device enters the fault state.

Risk time according to EN IEC 60947-5-3: If an actuator moves outside the actuating range, the safety outputs (OA and OB) are deactivated at the latest after the risk time.

If several devices are operated in a series connection, the risk time of the overall device chain will increase with each device added. Use the following calculation formula:

$$t_r = t_{r,e} + (n \times t_i)$$

t_r = Total risk time

$t_{r,e}$ = Risk time for single device (see technical data)

t_i = Risk time delay per device

n = Number of additional devices (total number -1)


Discrepancy time: The safety outputs (OA and OB) switch with a slight time offset. They have the same signal state no later than after the discrepancy time.

Test pulses at the safety outputs: The device generates its own test pulses on the safety outputs (OA and OB). A downstream control system must tolerate these test pulses.

This can usually be set up in the control systems by parameter assignment. If parameter assignment is not possible for your control system or if shorter test pulses are required, contact our support organization.

The test pulses are also output when the safety outputs are switched off.


12.1.2. Dimension drawing for safety switch CES-AR-C.2-...

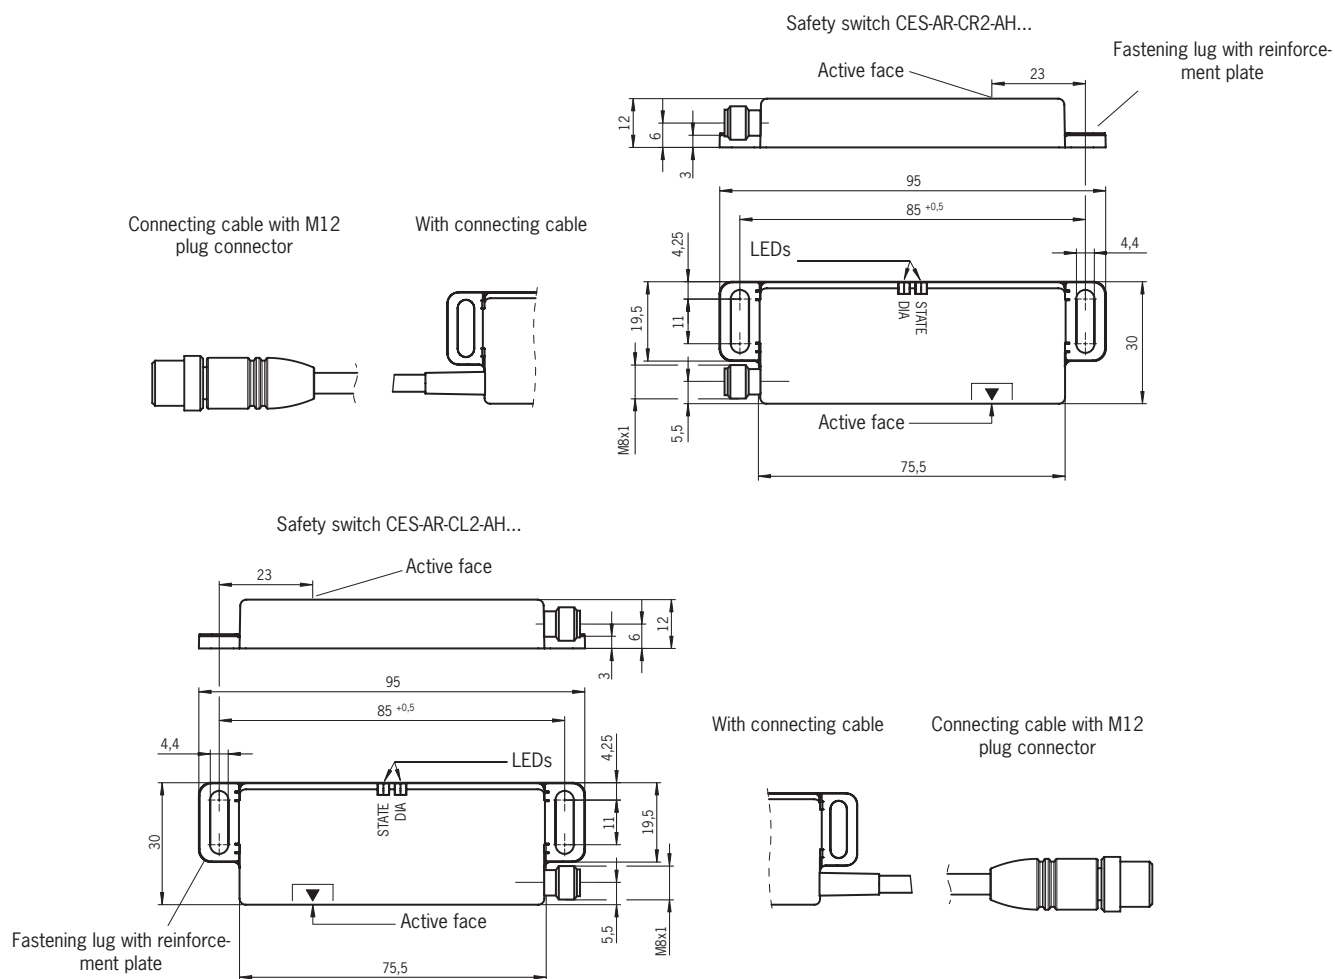

12.2. Technical data for actuator CES-A-BLN-...

Parameter	Value			Unit
	min.	typ.	max.	
Housing material	PBT plastic			
Dimensions - CES-A-BLN-R2/CES-A-BLN-L2 - CES-A-BLN-U2	95 x 30 x 12 55 x 30 x 12			mm
Ambient temperature	-40	-	+70	°C
Degree of protection	IP67/IP69K			
Installation position	Active face opposite read head			
Power supply	Inductive via read head			

12.2.1. Dimension drawing

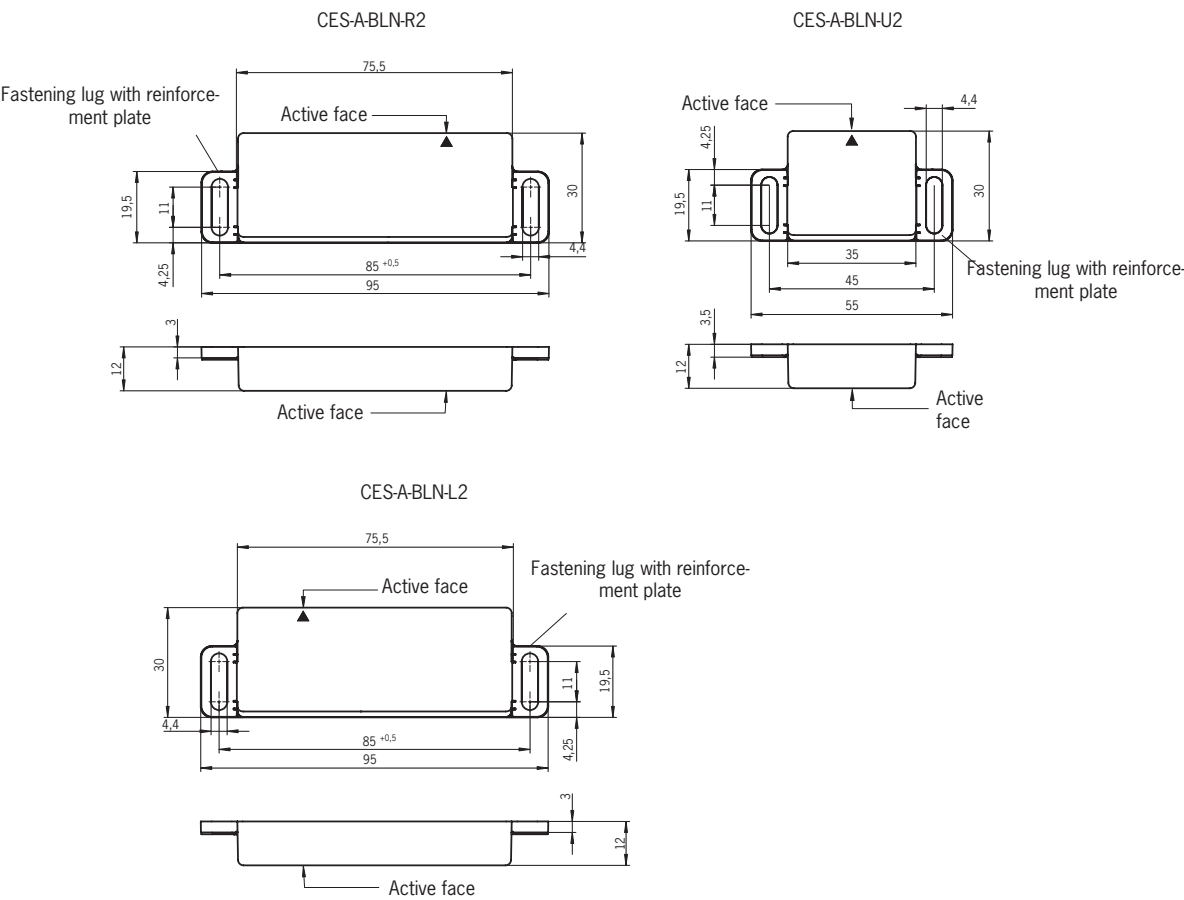

NOTICE

2 safety screws M4x14 included.

12.2.2. Operating distances

Operating distance for center offset $m = 0$ ¹⁾

Parameter	Value			Unit
	min.	typ.	max.	
Operating distance	-	15	-	mm
Assured operating distance s_{ao}	10	-	-	
Switching hysteresis	1	2	-	
Assured release distance s_{ar} - in x/z direction - in y direction	-	-	40 60	

1) The values apply to surface mounting of the actuator in metal.

12.2.3. Typical operating distance

(only in combination with actuator CES-ABLN-...)


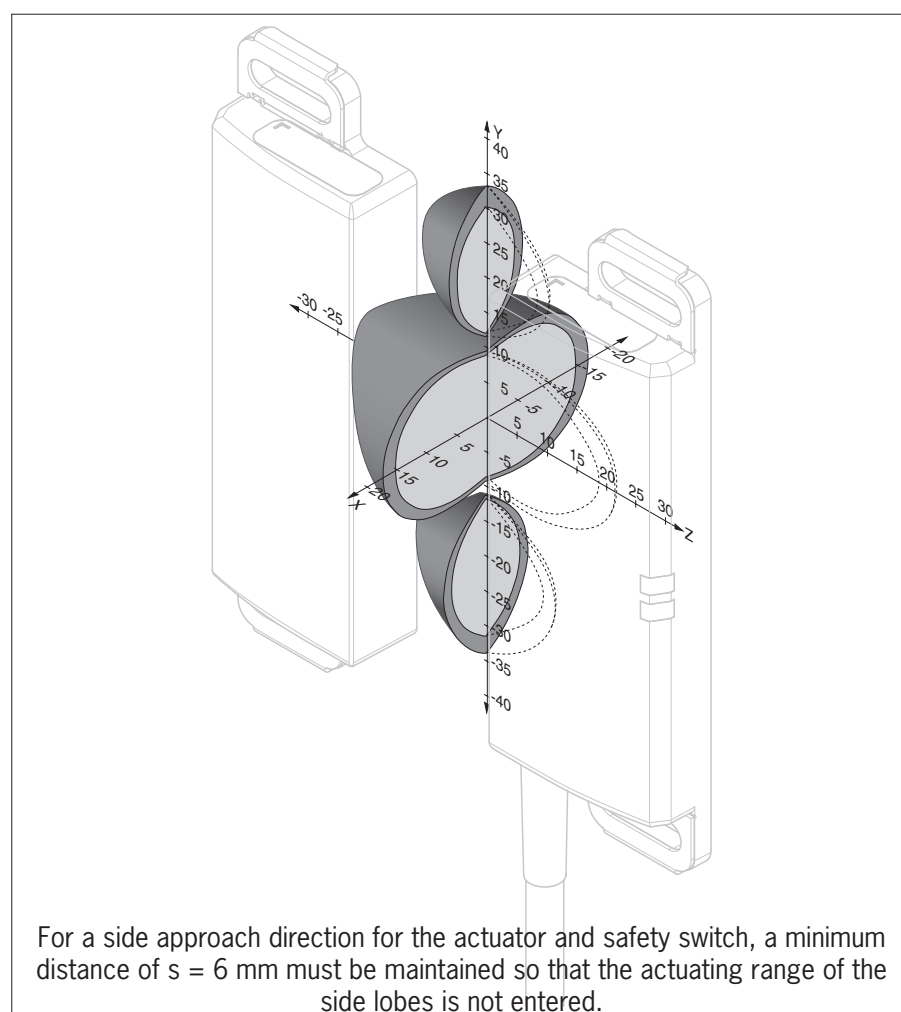


Fig. 6: Typical operating distance

12.3. Technical data for actuator CES-A-BDN-06

Parameter	Value			Unit
	min.	typ.	max.	
Housing material	Macromelt PA-based plastic			
Dimensions	26 x Ø 6			mm
Ambient temperature	- 40	-	+ 70	°C
Degree of protection	IP65/IP67			
Installation position	Any			
Power supply	Inductive via read head			

12.3.1. Dimension drawing

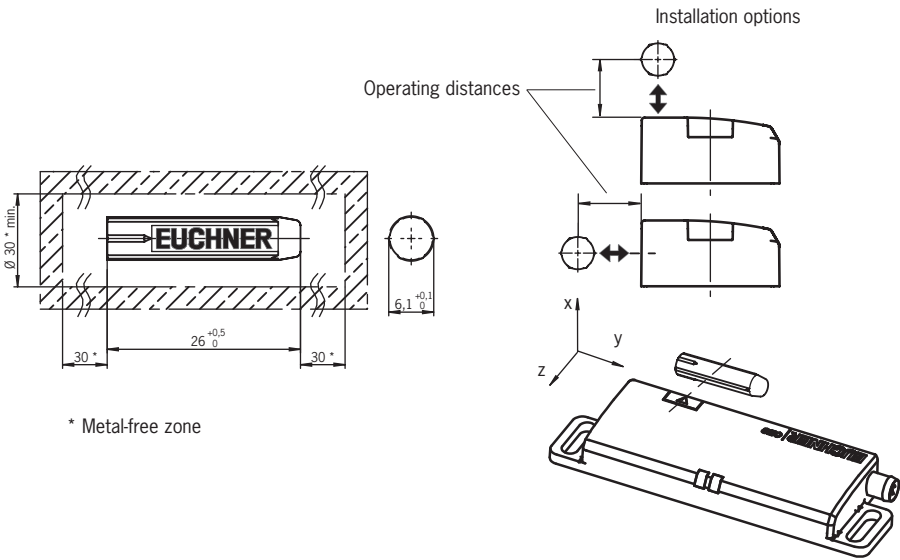

CAUTION

- Do not mount at temperatures below 0 °C.
- The actuator can be damaged during mounting.

12.3.2. Operating distances

Operating distance for center offset $m = 0$ ¹⁾

Parameter	Value			Unit
	min.	typ.	max.	
Operating distance	-	19	-	mm
Assured operating distance s_{ao}	14	-	-	
Switching hysteresis	-	2	-	
Assured release distance s_{ar} - in x/z direction - in y direction	-	-	40 60	

1) The values apply to surface mounting of the actuator in non-metallic material.

13. Ordering information and accessories



Tip!

Suitable accessories, e.g. cables or assembly material, can be found at www.euchner.com. To order, enter the order number of your item in the search box and open the item view. Accessories that can be combined with the item are listed in *Accessories*.

14. Inspection and service



WARNING

Loss of the safety function because of damage to the device.

- › In case of damage, the entire device must be replaced.
- › Only accessories or spare parts that can be ordered from EUCHNER may be replaced.

Regular inspection of the following is necessary to ensure trouble-free long-term operation:

- › Check the switching function (see chapter 10.3. *Functional check on page 24*)
- › Check the secure mounting of the devices and the connections
- › Check for contamination

No servicing is required. Repairs to the device are only allowed to be made by the manufacturer.

15. Service

If servicing is required, please contact:

EUCHNER GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen

Service telephone:

+49 711 7597-500

E-mail:

support@euchner.de

Internet:

www.euchner.com

16. Declaration of conformity

The product complies with the requirements according to

- › Machinery Directive 2006/42/EC (until January 19, 2027)
- › Machinery Regulation (EU) 2023/1230 (from January 20, 2027)
- › Cyber Resilience Act (EU) 2024/2847 (from December 11, 2027)

The EU declaration of conformity can be found at www.euchner.com. Enter the order number of your device in the search box. The document is available under *Downloads*.

Note on Directive 2014/53/EU RED (Radio Equipment Directive) and Delegated Regulation (EU) 2022/30

If this RED-compliant device is integrated into a machine or control system in accordance with the requirements in these instructions, this does not expand or change the device's radio characteristics and therefore does not influence its RED compliance.

Euchner GmbH + Co. KG
Kohlhammerstraße 16
70771 Leinfelden-Echterdingen
info@euchner.de
www.euchner.com

Edition:
2109309-12-09/26
Title:
Operating Instructions Non-Contact Safety Switch
CES-AR-C.2-...
(translation of the original operating instructions)
Copyright:
© EUCHNER GmbH + Co. KG, 09/2026

Subject to technical modifications; no responsibility is accepted for the accuracy of this information.